



# **Electronic Vibration Switch (EVS)**



ignition powered systems.

# **Features**

- Piezoelectric-crystal internal sensor with built-in microelectronics for reduced noise sensitivity
- Electronically integrated output signal that • measures and trips on velocity
- Adjustable calibrated set-point controls •
- Shutdown set-point measured in velocity •
- Optional 4-20 mA output for continuous • monitoring capability
- Solid-state outputs for setpoint trip •
- Adjustable time delay to prevent false • tripping on high-vibration start-ups or nonrepetitive transient events
- Self-test and calibration

The Electronic Vibration Switch (EVS) protects against equipment failure by monitoring velocity-based vibration levels and providing an early warning or shutdown when abnormal vibration is detected.

The EVS product can be connected to Murphy's TTD™ annunciator, Centurion™ or Millennium™ controllers for increased functionality. It also complements Murphy's VS2™ shock and excessive vibration/pulsation switch, which is designed to detect an abnormal shock or pulsation due to equipment failure and to shutdown other equipment in a system to prevent further damage.

The EVS product can be used on any equipment where abnormal vibration could lead to equipment damage, including:

- Cooling fans
- Engines
- Pumps
- Compressors
- Gear boxes
- Motors

Generator sets

Div 1 Housing)

A-EX = Analog (24VDC external power, switch and 4-20mA output, Div 1 Housing)

The EVS product can monitor and alert the operator of abnormal vibration caused by a variety of possible factors, including:

- Imbalance and misalignments
- Defective sleeve bearings
- Broken tie down bolts
- Defective ball or roller bearings
- Gear mesh
- Blade pass frequencies
- Detonation
- Broken parts

	EVS Product Table				
EVS	Model	Power	Bandwidth	Analog Out	Area Classification*
	EVS-S	24 VDC	6-500Hz	No	CL I, Gr C,D, Div 2
	EVS-A	24 VDC	6-500Hz	Yes	CL I, Gr C,D, Div 2
S = Standard (24VDC external power, switch only) A = Analog (24VDC external power, switch and	EVS-SB	Internal Battery	6-350Hz	No	CL I, Gr C,D, Div 2
4-20mA output)	EVS-S-EX	24 VDC	6-500Hz	No	CL I, Gr C,D, Div 1
	EVS-A-EX	24 VDC	6-500Hz	Yes	CL I, Gr C,D, Div 1
S-EX = Standard (24VDC external power switch only,	*Submitted for approval				

\*Submitted for approval



In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. MURPHY, the Murphy logo, TTD™, Centurion™ or Millennium™ and VS2™ are registered and/or common law trademarks of Murphy Industries, Inc. This document, including textual matter and illustrations, is copyright protected by Murphy Industries, Inc., with all rights reserved. (c) 2006 Murphy Industries, Inc.

# Specifications

## Environmental

- Operating Temperature:-40°F to 185°F (-40°C and +85°C).
- Humidity: 0-95% non-condensing
- Vibration: 30 g's (Mechanical stability)

#### **Power Requirements**

#### Murphy EVS-SB – Internal Battery Power

- Battery power provided via 7.2V V lithium-Ion cell(s)
- Open circuit maximum voltage of 10VDC.
- Batter Life 1 year under normal operation
- Normal operation 10v> Vbat> 6.4v
- Low battery mode: 5.0v< Vbat< 6.4v</p>
- System shutdown and alarm mode active below 5.0v
- Murphy EVS-A, EVS-S External DC Power
- External power: 8-32 VDC
- Input Current: 100mA Max

#### **Product Accuracy**

- ±5% of full scale at 1.5 ips and 21 deg C.
- ±5% Variation over temperature from 21 deg C, over
- operating range.. Integration Stage End-to-End Noise: <0.01 ips RMS

### Murphy EVS-S and EVS-A

- ±5%, at Bandwidth of 6 to 500 Hz from 50Hz calibration point
- ±3dB at Bandwidth of 3 to 875 Hz, worst case
- Murphy EVS-SB
- ±5%, at Bandwidth of 6 to 350 Hz from 50Hz calibration point
- ±3dB at Bandwidth of 3 to 875 Hz, worst case

#### **Trigger Feature**

- Trigger level between 0.1 and 1.5 inches per second (ips) Peak
- Trigger set with single turn adjustable PC board mount potentiometer
- PC board marked with 15 marks corresponding to 0.1 to 1.5 in 0.1 increments

#### Time Delay Feature

- Adjustable from 0 to 10 seconds
- Set with adjustable single turn PC board mount potentiometer
- PC board marked with 11 marks corresponding to 0 to 10 seconds in 1 second intervals

#### Output

- Normally-Open and Normally-Closed outputs simultaneously available
- Open-collector outputs sink to Common Ground
- 50 mA sink capacity
- Input voltage: 40 VDC maximum

# **Product Dimensions and Sensitivity Axis**

- Switch output is selectable for latched or non-latch configurations. Reset accomplished by reset pushbutton or external contact closure when in latch mode.
- Shutdown Alarm activated on power loss

## LED Outputs

## Alarm LED output

- Red LED
- LED strobing for first 5 minutes after entering Alarm mode
- Flashing thereafter until Reset activated
- Strobe rate: 2mSec on, every 0.5 ±0.25 seconds
- Flash rate: 2mSec on, every 6 ±1 seconds

## Power LED output

- Green LED
- Flash Duration: 2mSec
- Murphy EVS-S and EVS-A
   Flash once every 6 ±1 seconds

# Flash once every 6 ± Murphy EVS-SB

Battery status "Normal": Flash once every 6 ±1 seconds
 Battery in "Low-Battery" range: Flash once every 12±1 seconds

#### 4-20mA output (EVS-A only)

- Power obtained from power supply
- Loop Resistance: 600 ohms max at 24 V and 20mA.
- Current loop accuracy ±5% from internal setpoint
- 20 ma corresponds to 1.5 ips Peak
- 4 ma corresponds to 0 ips Peak

#### Reset


- Local reset switch w/momentary contact
- External reset: Available via header and will require an external relay or pushbutton contact to ground to activate the reset.
- Activation Period: Reset must be active for 0.5 sec. minimum to reset the switch.

#### **Circuit Functional blocks**

- Charge Amp interface
  - The input Transducer is an integrated PZT element for measuring acceleration with an internal charge converter.
     Maximum G level of 13 g's at 500hz
- Bandpass Filter
  - Frequency response dependent on model number (refer to "Product Accuracy")
  - Integration - Integration to convert from G to IPS peak

#### Approvals

 Hazardous Area approvals applied for. (refer to "Product Table") NMEA 4

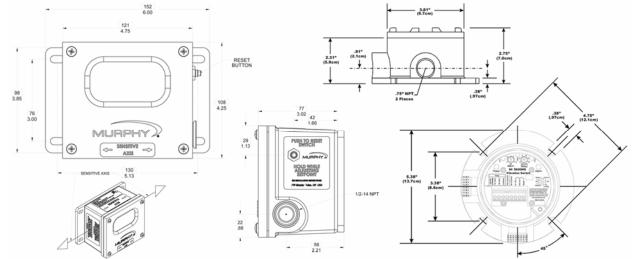

**Warranty** - A limited warranty on materials and workmanship for one year is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/support/warranty.htm